



Earth Resistance Testers

Ensure safe operation and reduce power quality problems with Amprobe earth resistance testers. Use the DGC-1000A for earth loop resistance checks.

DGC-1000A Earth Resistance Clamp Meter

- TRMS current measurement including leakage current
- Earth loop resistance range 0.025 to 1500 Ω
- Data logging capability 116 records
- Individual data point recording
 User selectable High & Low ohm audible alarms

- Simple and easy to use, no test leads or auxiliary electrodes necessary
- Jaw opening 23 mm
- Safety acc. EN 61010, CAT III/300V, CAT II/600 V

FEATURES	DGC-1000A
Earth Resistance	0.025Ω - 1500Ω
AC Current	0.2mA - 30.00A